


# Crisscross Wallet



Fuse interfacing to wrong side of full body piece and mark curved sewing lines.



Add female snap to full body piece 1 1/2 inches from the bottom, with female piece facing right side.

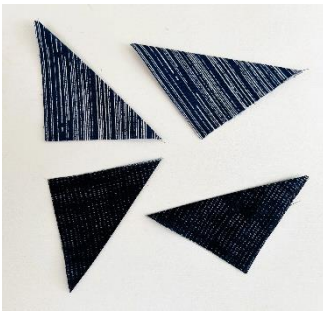

Cut Pockets 3 1/4 x 3 1/4. Fold in half and iron



Place triangles on the four corners of the lining body. Stitch around at a scant 1/4" (7mm)



Attach inner flap to triangle pocket piece, right sides facing. Stitch at 3/8" (4 mm).



Sew full body piece to inside piece right sides facing. Stitch 1/4" (7mm) leaving 3" open. Clip corners and curve.



Turn right-side out. Top stitch around at a scant 1/4" (7mm). Add male snap, lined up with female snap when folded.